



## 1.0 Installation

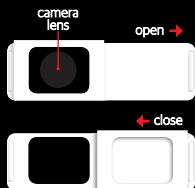


- 1 Remove the double tape tabs.
- 2 Position base over the camera lens, then press firmly.
- 3 Once installed, simply slide to the left to close and to the right to open.

## Channel Phone Installation

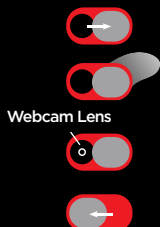

- 1 Slide cover to expose hole.
- 2 Remove adhesive from back of unit.
- 3 Align hole on the cover over camera lens and press firmly.
- 4 Slide to close camera.

## Channel Tablet Installation

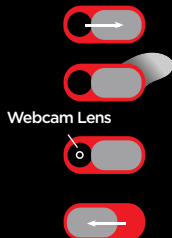

- 1 Slide cover to expose hole.
- 2 Remove adhesive from back of unit.
- 3 Align hole on the cover over camera lens and press firmly.
- 4 Slide to close camera.



PATENTED D669,112S  
& other patents pending

**C-Slide Security Pack**